


Head Office
 14208 - 128 AVENUE NW
 EDMONTON AB T5L 3H5
 CANADA
 Tel: 780 - 447 - 1904
 Fax: 780 - 447 - 2056



Sales Office
 83 ENDEAVOUR DRIVE
 CAMBRIDGE ON N3C 4C2
 CANADA
 Tel: 519 - 651 - 1050
 Fax: 519 - 651 - 1051

Technical Data : **SM-4 PARTS LIST**

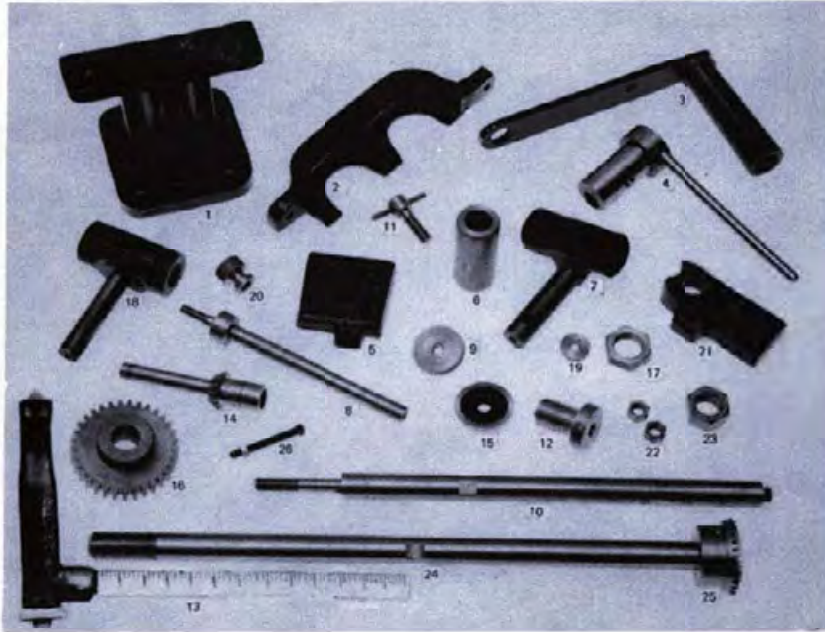

PARTS NOT SHOWN:
EXTENSION BARS:
 #13A - MEDIUM BAR 28" - 54"
 #13B - LONG BAR 54" - 80"
 #27 - SPANNER WRENCH
SET OF CUTTERS:
 #28 - FOR SHEET METAL
 #29 - FOR NON-SHEET METAL.....

MODEL SM-4 GASKET CUTTING MACHINE PARTS LIST

PART #:

- 1. Base
- 2. Gear Guard
- 3. Handle
- 4. Top Cutter Lifter Cam
- 5. Index Plate
- 6. Spacer
- 7. Thrust Bearing Housing
- 8. Spindle for Center Bar
- 9. Washer for Center Bar Spindle
- 10. Top Shaft
- 11. Tee Screw
- 12. Thrust Bearing
- 13. Center Bar Complete (Standard)
- 14. Bottom Cutter (Geared)
- 15a. Top Cutting Disc for Sheet Metal
- 15b. Top Cutting Disc for Non-Metallic Material
- 16. Spur Gear - For Top or Bottom Shaft
- 17. Thrust Bearing Lock Nut
- 18. Top Cutter Lifter Bearing
- 19. Thrust Bearing Housing Washer
- 20. Knurled Nut (Left Hand Thread)
- 21. Bottom Cutter Support Bearing
- 22. Thrust Bearing Spindle Lock Nuts (Pair) 3/8" - 24 THDS
- 23. Bottom Shaft Lock Nuts (Pair) 3/4" - 16 THDS
- 24. Bottom Shaft with Bevel Gear
- 25. Bevel Gear for Bottom Shaft
- 26. Adjusting Screw for Depth of Top Cam with Locknut